# PRESSURE DISTRIBUTION COMPONENT MANUAL FOR PRIVATE ONSITE WASTEWATER TREATMENT SYSTEMS

State of Wisconsin Department of Commerce Division of Safety and Buildings

#### TABLE OF CONTENTS

		Page
I.	Introduction and Specifications	3
Π.	Definitions	4
III.	Description and Principle of Operation	5
IV.	Design	6
V.	Site Preparation and Construction	9
VI.	Operation, Maintenance and Performance Monitoring	9
VII.	Graphs 1 through 6	11
VIII.	Tables 4 through 7	17
IX.	References	20
X.	Pressure Distribution Worksheet	21
XI.	Plan Submittal and Installation Inspection	24

# Published on June 11, 1999 by Dept. of Commerce Division of Safety and Buildings Safety and Buildings Publication SBD-10573-P (R.6/99)

## **ADA Statement**

The Department of Commerce is an equal opportunity service provider and employer. If you need assistance to access services or need material in an alternate format, please contact the Department at (608) 266-3151 or TTY (608) 264-8777.

#### I. INTRODUCTION AND SPECIFICATIONS

This Private Onsite Wastewater Treatment System (POWTS) component manual provides design, construction, inspection, operation, and maintenance specifications for a pressure distribution component. However, these items must accompany a properly prepared and reviewed plan acceptable to the governing unit to help provide a system that can be installed and function properly. Violations of this manual constitute a violation of chs. Comm 83 and 84, Wis. Adm. Code. The design provides equal distribution of effluent from a dose tank into a distribution cell of a soil treatment or dispersal component. To ensure that equal distribution is achieved, specifications in Tables 1, 2, and 3 must be met.

Note: Detailed plans and specifications must be developed and submitted for review and approval by the governing unit having authority over the plan for the installation. Also, a Sanitary Permit must be obtained from the department or governmental unit having jurisdiction. See Section XI for more details.

FLOV	Table 1 VS AND LOADS
Number of effluent doses	Must conform to the requirements of the receiving component design .
Wastewater particle size	≤ 1/8 inch diameter
Dose volume	$\geq$ 5 times the void volume of the distribution lateral(s)
Head pressure at distal end	$\geq 2.5 \text{ ft. } (1/4\text{" and } 3/16\text{" orifices}), \geq 5 \text{ ft. } (1/8\text{" orifices})$
Flow velocity in force main and manifold	≥ 2 ft/sec
Size of distribution cell	≤ 5000 square feet

Table 2 SIZE AND ORIENTATION				
Diameter of force main	≤ 6 inch			
Diameter of force main	≥ 1-1/2 inch			
Diameter of manifold	≤ 6 inch			
Diameter of manifold	≥ 1 inch			
Diameter of lateral	≤ 3 inch			
Diameter of lateral	≥ 3/4 inch			
Diameter of discharge orifice	$\leq 1/4$ inch			
Diameter of discharge orifice	≥ 1/8 inch			
Distribution cell area per orifice	$\leq$ 6 ft <sup>2</sup> for systems with below ground infiltrative			
	surfaces and mound components			
Distance between laterals	≤ 4feet			
Distance from lateral to edge of distribution cell	$\leq 1/2$ distance between laterals, but not >1.5 feet			
Distance from discharge orifice to edge of	≥ 6 inches			
distribution cell				

SIZE AND O	ble 2 RIENTATION
(con	tinued)
Elevation of laterals	Level or ≤ 1 inch slope back to manifold
Location of orifices for laterals in stone	Bottom of lateral or top of lateral if orifice shields
aggregate	are provided
Location of orifices for laterals not in stone	Bottom of lateral or top of lateral, if orifice
aggregate	shields are provided

	Table 3				
OTHER SPECIFICATIONS					
Spacing between pipe supports for	Meets requirements of s. Comm 82.60, Wis. Adm. Code				
horizontal pipe					
Material specifications	Meet requirements of s. Comm 84.30, Wis. Admin. Code				
Joint specifications	Meets requirements of s. Comm 84.40, Wis. Admin. Code				
Connection to manifold or laterals	By use of tee or 90° elbow				
Pump	Rated by pump manufacture as an effluent or sewage pump				
Siphon	Rated by siphon manufacture as an effluent or sewage siphon				
Dose tank	Meets requirements of chs. Comm 83 and 84, Wis. Admin. Code				
Pump controls	Meet requirements of chs. Comm 83 and 84, Wis. Admin., Code				
Electrical equipment and wiring	Meet requirements of ch. Comm 16 and 83, Wis. Admin. Code				
Access to pump	Means of removing pump by not entering dose tank must be				
	provided				
Alarm or warning system	Meets requirements of ch. Comm 83, Wis. Admin. Code				
Duplex pumps	Meet requirements of ch. Comm 83, Wis. Admin. Code				
Installation inspection	In accordance with ch. Comm 83, Wis. Adm. Code				
Management	Meets requirements of ch. Comm 83, Wis. Admin. Code and this				
	manual				

#### II. DEFINITIONS

Definitions unique to this manual are included in this section. Other definitions that may apply to this manual are located in ch. Comm 81 of the Wis. Adm. Code or the terms use the standard dictionary definition.

- A. "Distribution line" means the total length of two laterals that are connected to a manifold at a common point.
- B. "Drain back" means the amount of treated effluent that will drain to the dose tank after a single dosing event.
- C. "Force main" means the piping from the pump or siphon to the manifold or to the lateral tee or coupling connecting laterals to the force main.

- D. "Lateral" means the length of perforated pipe starting at the point of effluent entry to the distal end orifice.
- E. "Manifold" means the piping between the force main and the laterals.
- F. "Orifice shield" means a device that dissipates the energy of the orifice discharge and protects the orifice from blockage due to aggregate.

#### III. DESCRIPTION AND PRINCIPLE OF OPERATION

Pressure distribution is a method to provide a specific volume of effluent to a specific area with each dosing cycle. The design of a pressure distribution component on one elevation is such that the volume of water passing out each hole in the network is approximately equal. This is achieved by designing for 75 to 85 percent of the total head loss in the network to be lost when liquid passes through the distribution hole and only 10 to 15 percent of the total head loss to occur in the delivery piping.

The component consists of controls and a dosing chamber containing a pump or siphon that discharges effluent into a network of small diameter perforated pipes designed to discharge equal amounts of effluent from each orifice

In a pressure distribution component using a pump, partially or fully treated wastewater enters a dose chamber through the inlet. As liquid begins to fill the dose chamber, it raises the "off" float. When the liquid level in the tank is lifted to the "pump on" level, the "on" float activates the pump and the predetermined dose is pumped from the pump chamber through the force main to the distribution laterals.

In a pressure distribution component using a siphon, partially or fully treated wastewater enters a dose chamber through the inlet When the liquid level reaches a pre-determined depth in the dose chamber, the siphon discharges the liquid through a forcemain to the distribution laterals. Although the siphon functions without any moving parts, it does require monitoring. Studies have shown that the siphon may begin to "trickle" for no apparent reason, and if this problem is not corrected, the holes and laterals may foul or it reverts to gravity discharge.

The laterals are designed to fill quickly to provide equalization throughout the system. Air is pushed ahead of the liquid through the force main, manifold (if a manifold is required), laterals, and discharged through the drilled holes, entering the distribution cell.

A properly designed and installed pressure distribution component uniformly distributes effluent over the entire distribution cell. This prevents the soil from becoming over loaded in one area while not receiving effluent in another area. It also allows for a period of time between doses to drain the infiltrative surface to maintain unsaturated flow conditions in the soil.

The primary application of a pressure distribution component is in locations where it is desirable to:

- 1. Maintain a uniform effluent application rate throughout the distribution cell;
- 2. Treat and dispose of effluent in the uppermost levels of the soil profile;
- 3. Aid in mitigating the potential contamination of groundwater in areas of excessively permeable soils;
- 4. Improve the performance and increase the life span of a dispersal cell; and

5. Reduce the chance of breakout or seepage on slopes.

Pressure distribution components are used in at-grades, in-ground soil absorption, mounds, single pass sand filters and other components. Also pressure distribution may be appropriate for larger dispersal cell components. Finally, in certain conditions where pumping is necessary due to elevation problems, pressure distribution can be incorporated with little extra expense.

This manual specifies the design, construction, inspection, operation, and maintenance criteria for one method of providing equal distribution of wastewater in a soil treatment and/or dispersal component. The designer must also be familiar with the requirements of the component for which the pressure distribution component will be used in order to have a complete system design that will meet the Wisconsin Administrative Code.

#### IV. DESIGN

The following steps need to be followed to design a pressure distribution component:

- 1. Determine soil treatment and/or dispersal component layout This is based on the type of component and the design soil application rate.
- 2. Determine lateral length and spacing in accordance with the soil treatment/dispersal component design or Table 2, if not specified in the soil treatment/dispersal component design. See Figure 1.

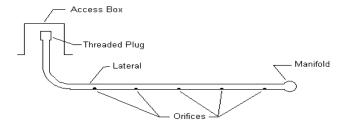


Figure 1 – Lateral Length

- 3. Determine manifold length and location.
- 4. Determine number of orifices in a lateral. How many orifices should be drilled in a lateral depends on the type of system and the design loading rate of the distribution cell. The number of orifices is determined by using the following equation. See figure 2.

$$n = L/x + .5$$

Where: n = number of orifices  $L = lateral \ length$  $x = orifice \ spacing$ 

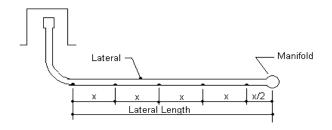


Figure 2 – Number of Orifices in a Lateral

5. Determine the number of orifices in a <u>distribution line</u>. The number of orifices is determined by using the following equation. See figure 3.

$$n = d/x + 1$$
Where:  $n = number of orifices$ 
 $d = distribution line length$ 
 $x = orifice spacing$ 

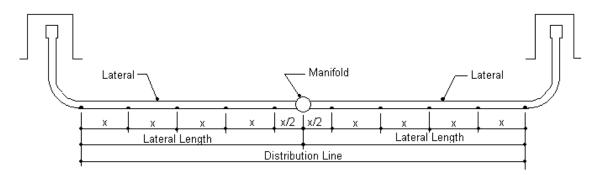


Figure 3 – Number of Orifices in a Distribution Line

- 6. Select orifice size of 1/8, 3/16, or 1/4 inch.
- 7. Determine lateral diameter Using Graphs 1 through 6.
- 8. Select distal pressure A design option based on site specific elevations and effluent delivery preferences and requirement of Tables 1 through 3.
- 9. Calculate lateral discharge rate using Table 4. (orifice discharge rate at selected distal pressure multiplied by the number of holes per lateral).
- 10. Determine manifold diameter Determined by using Table 5.

- 11. Calculate component discharge rate By multiplying the lateral discharge rate by the number of laterals.
- 12. Select a pipe size for the force main by using the calculated discharge rate and Table 6.
- 13. Determine the void volume of the distribution laterals by multiply the total length of the laterals by the volume given in Table 7 for the diameter of the laterals.

If a pump is selected follow step #14.

If a siphon is selected proceed to step # 16

14. Determine volume of dose chamber for components pressurized by a pump.

The dose chamber shall contain sufficient volume to dose the distribution cell as required by its system design, retain drain back volume, contain a one day reserve zone, and allow for protection of the pump from solids.

A reserve capacity is required on a system with only one pump. Other reserve capacities may also be required by the manual for the component type the dose chamber serves.

The reserve volume is at least a one day holding capacity for the building. Reserve capacity may be calculated based using 100 gallons per bedroom per day for one and two family residences. Reserve capacity must also meet requirements in the manual for a component type, which contains the pressure distribution component.

The dose volume shall be included in the sizing of the dose chamber.

The pump alarm activation point must be at least 2 inches above the pump activation point.

Allow "dead" space below the pump intake to permit settling of solids in the pump tank. This can be accomplished by placing the pump on concrete blocks or other material that can form a pedestal.

The pump manufacturer requirements shall be followed. This may include the "pump off" switch located high enough to allow for complete immersion of the pump in the tank.

- 15. Select a pump that will provide an average flow equal to or greater than the total discharge rate of the orifices at a pressure equal to or greater than the operational pressure, plus the friction loss of the manifold and force main. If the perforation discharge rate is greater than the pump discharge rate, the system head will be insufficient.
- 16. Select a siphon that will provide an average flow equal to or greater than the total discharge rate of the orifices at a pressure equal to or greater than the operational pressure plus the friction loss of the manifold and the force main. The system head for components using automatic siphons must be developed in the force main. The difference in the elevation from the bottom of the siphon bell to the lateral must be greater than or equal to the force main friction loss plus the system head required. If the perforation discharge rate is greater than the siphon discharge rate, the system head will be insufficient.

17. Determine volume of dose chamber for components pressurized by a siphon.

The dose chamber shall contain sufficient volume to allow the siphon to dose the component as required by the soil treatment and/or dispersal component design and allow for protection of the siphon from solids.

#### V. SITE PREPARATION AND CONSTRUCTION

Procedures used in the construction of a pressure distribution component are just as critical as the design of the treatment and/or dispersal component. A good design with poor construction results in failure. Construction procedures for a pressure distribution component are as follows:


- 1. Review design and installation requirements for the type of treatment and/or dispersal component for which the pressurized system is to be installed.
- 2. Drill holes for the orifices at the locations required by the design. Remember to remove all burrs from the pipe and orifices.
- 3. Assemble the distribution network as determined by the pressure distribution component design, making sure to solvent cement all joints in the system.
- 4. Extend the end of each lateral up with the use of long turn or 45° fitting to a point within six inches of the final grade. Terminate the ends of the laterals with a valve, threaded cap or threaded plug. Provide access from final grade for the valve, threaded cap or threaded plug.
- 5. Install the pump or siphon as required by ch. 83 of the Wis. Admin. Code.

#### VI. OPERATION, MAINTENANCE AND PERFORMANCE MONITORING


- A. The component owner is responsible for the operation and maintenance of the component. The county, department or POWTS service contractor may make periodic inspections of the components, checking for sludge accumulation in the dose chamber, condition of electrical components, alarms, dose rate, dose volume and frequency, etc.
  - The owner or owner's agent is required to submit maintenance records routinely to the county or other appropriate jurisdiction and/or the department.
- B. Design approval and site inspections before, during, and after the construction is accomplished by the county or other appropriate jurisdictions in accordance with ch. Comm 83 of the Wis. Admin. Code.

- C. Other routine and preventative maintenance aspects are:
  - 1. Dose chambers are to be inspected routinely and maintained when necessary in accordance with their approvals.
  - 2. Inspection of the component performance is required at least every three years. Inspection includes checking the dose rate, volume and frequency.
  - 3. Partial plugging of the distribution network may be detected by extremely long dosing times. The ends of the distribution laterals should be exposed and the pump activated to flush out any solid material. The liquid that is flushed out of the laterals is to be directed back into the distribution cell or into an acceptable container. If necessary, the laterals can be cleaned.
- D. User's Manual: A user's manual is to accompany the pressure distribution component. The manual is to contain the following as a minimum:
  - 1. Diagrams of all components and their location. This should include the location of the access ports for cleaning and/or flushing the component.
  - 2. Specifications for all electrical and mechanical components.
  - 3. Names and phone numbers of local health authority, component manufacturer or management entity to be contacted in the event of a failure.
  - 4. Information on the periodic maintenance of the component, including electrical/mechanical components.
  - 5. Notice that the dose chamber may fill due to flow continuing during pump malfunction or power outages. One large dose when the power comes on or when the pump is repaired may cause the dispersal system to have problems. In this situation, the pump chamber should be pumped by a licensed pumper before pump cycling begins or other measures shall be used to dose the component with only the proper amount of influent. This may include manual operation of the pump controls until such time the pump chamber has reached its normal level.
- E. Performance monitoring must be performed on pressure distribution systems installed under this manual.
  - 1. The frequency of monitoring must be:
    - a. At least once every three years following installation and,
    - b. At time of problem, complaint, or failure.
  - 2. Reports are to be submitted in accordance with ch. Comm 83, Wis. Admin. Code.


Minimum Lateral Diameters Based on Orifice Spacing for 1/8" Diameter Orifices

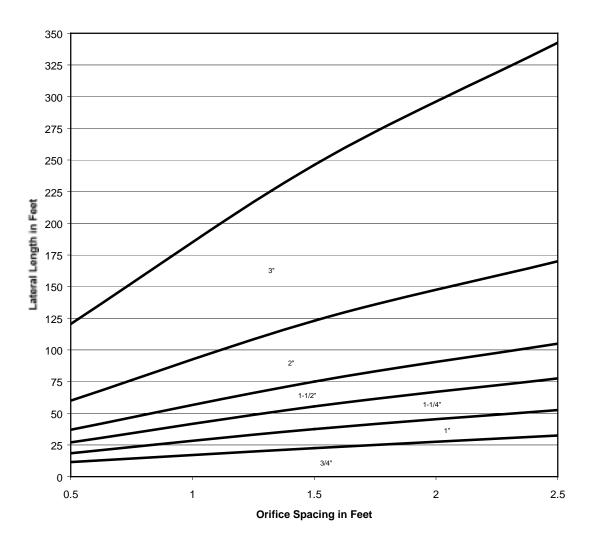


Minimum Lateral Diameters Based on Orifice Spacing for 1/8" Diameter Orifices

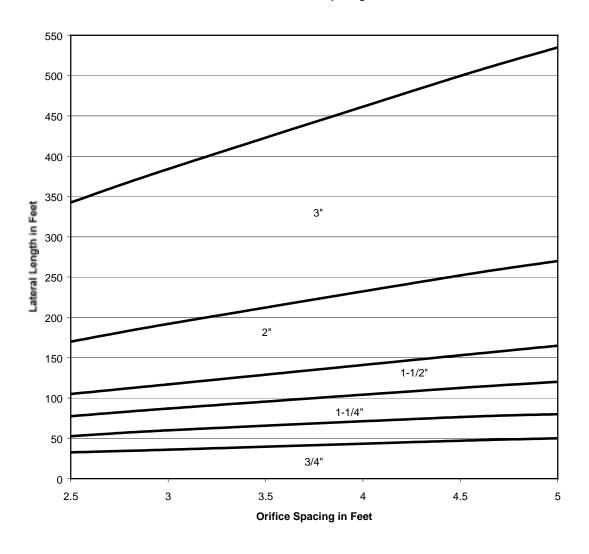


Minimum Lateral Diameter Based on Orifice Spacing for 3/16" Diameter Orifices

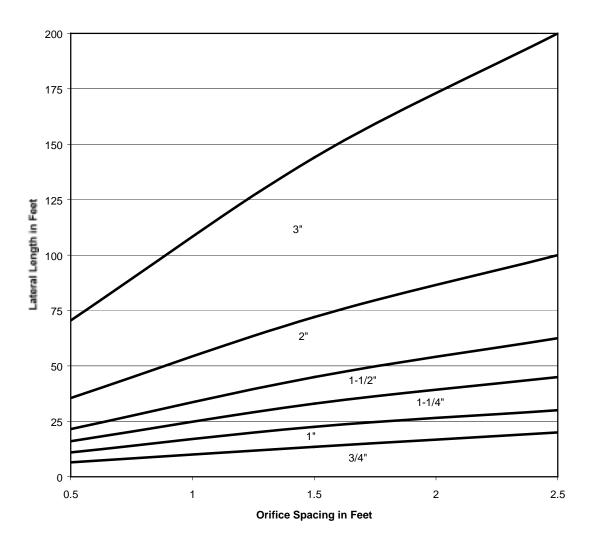


Minimum Lateral Diameter Based on Orifice Spacing for 3/16" Diameter Orifices

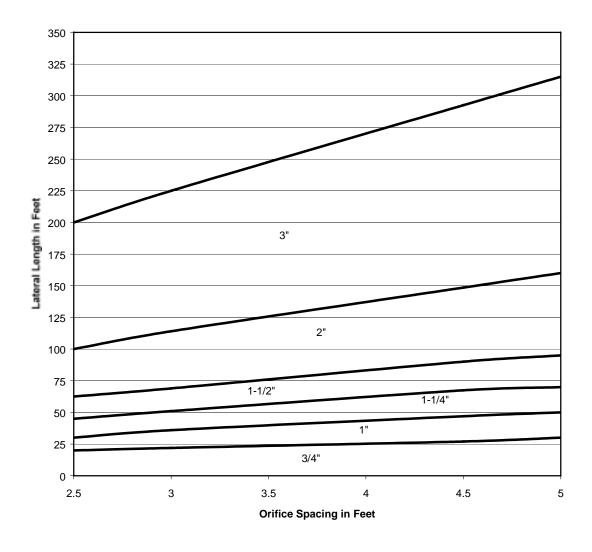

Minimum Lateral Diameter Based on Orifice Spacing for 1/4" Diameter Orifices

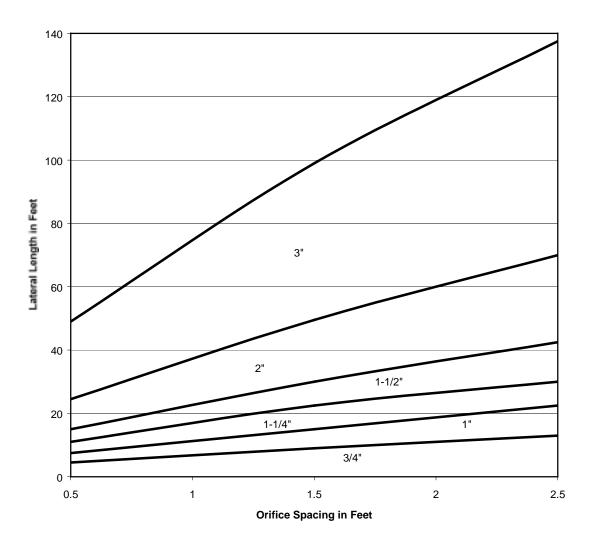

Minimum Lateral Diameter Based on Orifice Spacing for 1/4" Diameter Orifices

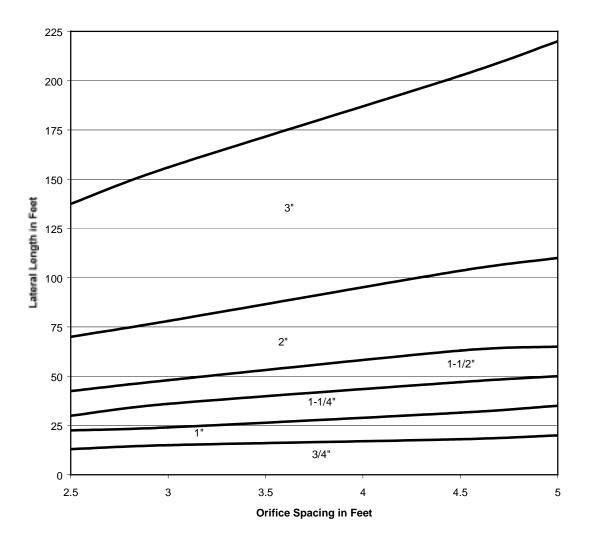


VIII. TABLES

	Discharge Rate	<b>Table 4</b> es in Gallons per Minute from Orifi	ices <sup>a</sup>
Pressure in		Orifice Diameter	
feet	1/8	3/16	1/4
2.5	NP	0.66	1.17
3	NP	0.72	1.28
3.5	NP	0.78	1.38
4	NP	0.83	1.47
4.5	NP	0.88	1.56
5	0.41	0.93	1.65
5.5	0.43	0.97	1.73
6	0.45	1.02	1.80
6.5	0.47	1.06	1.88
7	0.49	1.10	1.95
7.5	0.50	1.14	2.02
8	0.52	1.17	2.08
8.5	0.54	1.21	2.15
9	0.55	1.24	2.21
9.5	0.57	1.28	2.27
10	0.58	1.31	2.33

Note a: Table is based on - Discharge in GPM = 11.79 x Orifice Diameter<sup>2</sup> in inches x (Pressure in Feet)<sup>1/2</sup> NP means not permitted

						Tab	le 5						
			Maximu	ım Manifold	Length Base	ed on Indivi	dual Lateral	Flow Rates a	and Lateral	Spacing			ļ
	Individual Lateral 1-1/4" Diameter Manifold Discharge Rate			1-1/2" Diameter Manifold									
End	Center			Lateral	Spacing					Lateral	Spacing		
Manifold	Manifold	1.5	2	2.5	3	3.5	4	1.5	2	2.5	3	3.5	4
10	5	4.5	6	7.5	9	10.5	8	7.5	8	10	12	14	12
20	10	3	4	5	6	7	8	4.5	6	7.5	6	7	8
30	15	3	4					3	4	5	6	7	8
40	20							3	4	5	6		
50	25							3	4				
60	30							3					
Individu	al Lateral			2" Diamete	er Manifold					3" Diamete	er Manifold		
Dischar	rge Rate												
End	Center			Lateral	Spacing					Lateral	Spacing		
Manifold	Manifold	1.5	2	2.5	3	3.5	4	1.5	2	2.5	3	3.5	4
10	5	12	14	15	18	21	20	22.5	28	32.5	36	38.5	44
20	10	7.5	8	10	12	14	12	15	18	20	24	24.5	28
30	15	6	6	7.5	9	10.5	12	12	14	15	18	21	20
40	20	4.5	6	7.5	6	7	8	9	12	12.5	15	17.5	16
50	25	4.5	4	5	6	7	8	7.5	10	12.5	12	14	16
60	30	3	4	5	6	7	8	7.5	8	10	12	14	12
70	35	3	4	5	6	7	8	6	8	10	9	10.5	12
80	40	3	4	5	6	7		6	8	7.5	9	10.5	12
90	45	3	4	5	6			4.5	6	7.5	9	10.5	12
100	50	3	4	5				4.5	6	7.5	9	10.5	12
110	55	3	4					4.5	6	7.5	9	10.5	8
120	60	3						4.5	6	7.5	6	7	8
130	65	3						4.5	6	5	6	7	8
140	70							4.5	6	5	6	7	8
150	75							4.5	6	5	6	7	8
160	80							4.5	4	5	6	7	8
170	85							4.5	4	5	6	7	8
180	90							3	4	5	6	7	8
190	95							3	4	5	6	7	8
200	100							3	4	5	6	7	8

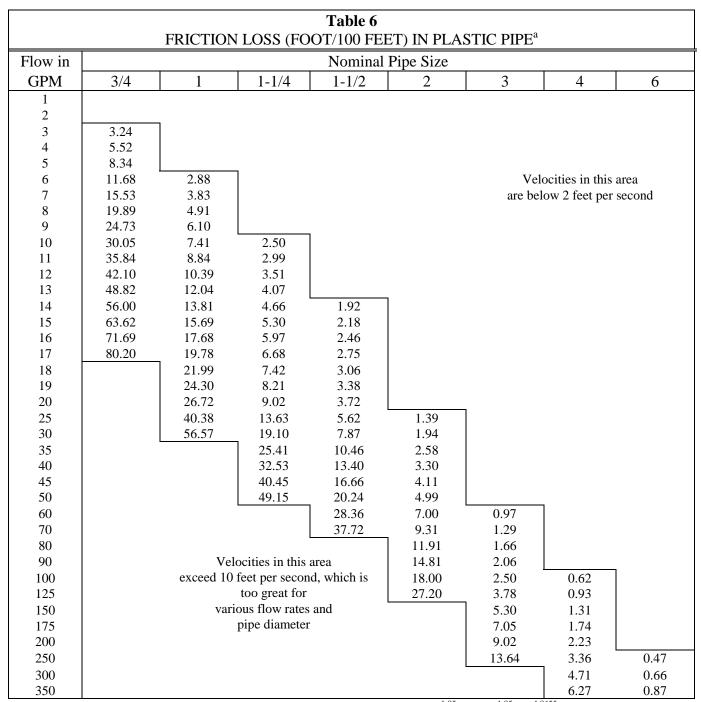

Note a: Table is based on – Hazen-Williams formula:  $h = 0.002082L \times (100/C)^{1.85} \times (gpm^{1.85} \div d^{4.8655})$ 

Where: h = feet of headL = Length in feet

C = Friction factor from Hazen-Williams (145 for plastic pipe)

gpm = gallons per minute

d = Nominal pipe size

Ta	ble 7		
VOID VOLUME FOR VARIOUS DIAMETER PIPES			
BASED ON N	NOMINAL I.D. <sup>a</sup>		
Nominal Pipe Size	Gallons per Foot		
3/4	0.023		
1	0.041		
1-1/4	0.064		
1-1/2	0.092		
2	0.163		
3	0.367		
4	0.65		
6	1.469		
1-1/2 2 3 4	0.064 0.092 0.163 0.367 0.65		

Note a: Table is based on -  $\pi r^2$  x 12"/ft ÷ 231 cu.in./cu.ft.

Where: r = nominal pipe size in inches

#### VIII. RREFERENCES

Department of Industry, Labor and Human Relations 1994, "Pressure Distribution Manual" Small Scale Waste Management Project, University of Wisconsin – Madison, 1981, R.J. Otis, "Design of Pressure Distribution Networks for Septic Tank-Soil Absorption Systems."

#### X. PRESSURE DISTRIBUTION WORKSHEET

#### **Information needed for Pressure Distribution Design:**

Daily wastewater flow =	gal/day
Design loading rate =	gal/day
<b>System Configuration:</b>	
1 <b>ft.</b> system width	

## **Proposed Lateral Layout:**

2. \_\_\_\_\_ **ft.** system length

3	•	number	of	lateral	ls

# **Choose the Orifice Spacing:**

$$n = L/x + .5$$

Where: n = number of orifices L = lateral length, in feet x = orifice spacing, in feet

Note: Networks with central manifold have laterals on each side of the manifold. Therefore the number of laterals are two times as many as a network with an end manifold.

Re-evaluate the Lateral Length:
11 <b>ft.</b> final lateral length  (# of orifices x orifice spacing - 1/2 orifice spacing = optimal length)
Choose the Lateral Diameter:
12 <b>in.</b> (Graphs 1-6)
Calculate the Lateral Discharge Rate:
13 <b>gpm</b> lateral discharge rate.  Discharge rate per orifice x # of orifices per lateral = lateral discharge rate
Choose the Manifold Diameter:
14 <b>in.</b> (Table 5)
Calculate the System Discharge Rate:
15 <b>gpm</b> (# of laterals x lateral discharge rate)
Calculate the Force Main Friction Loss:
16 ft. force main length
17 in. force main diameter (Table 6)
18 <b>gpm</b> system discharge rate (from #15)
19 <b>ft.</b> friction loss in ft/100 ft. x length ÷ 100 ft. (Table 6)
Calculate the Total Dynamic Head:
20 <b>ft.</b> system head. (Distal pressure #6 x 1.3 ft.)
21 <b>ft.</b> vertical lift (pump off to lateral elevation)
22 ft. friction loss (in the force main in feet #19)
23 <b>ft.</b> Total Dynamic Head (TDH) (sum of #20 through #22)

24 gal. based on system type.
25 <b>gal.</b> - drain back
26 <b>gal.</b> - actual dose volume (#24 + #25)
Pump Selection:
27 <b>gpm</b> pump discharge rate at TDH (#23) (not less than system discharge rate, #15)
<b>Dose Chamber Sizing:</b> (Sizing of dose chamber serving a sand filter may have different requirements. See component manual or manufacturer's or designer's specifications for sizing criteria.)
28 <b>in.</b> tank bottom to "off" switch gal.
29 in. dose volume (from #26)gal. ("off" to "on" switch)
30 in. "on" switch to alarm switch gal.
31 <b>in.</b> reserve capacity gal. (residential = 100 gal/BR)
32 in. dose chamber capacitygal.

**Calculate the Dose Volume:** 

#### XI. PLAN SUBMITTAL AND INSTALLATION INSPECTION

#### A. Plan Submittal

In order to install a system correctly, it is important to develop plans that will be used to install the system correctly the first time. The following checklist may be used when preparing plans for review. The checklist is intended to be a general guide. Conformance to the list is not a guarantee of plan approval. Additional information may be needed or requested to address unusual or unique characteristics of a particular project. Contact the reviewing agent for specific plan submittal requirements, which the agency may require that are different than the list included in this manual.

#### **General Submittal Information**

- Photocopies of soil reports forms, plans, and other documents are acceptable. However, an original signature is required on certain documents.
- Submittal of additional information requested during plan review or and questions concerning a
  specific plan must be referenced to the Plan Identification indicator assigned to that plan by the
  reviewing agency.
- Plans or documents must be permanent copies or originals.

#### Forms and Fees

• Application form for submittal, provided by reviewing agency along with proper fees set by reviewing agent.

#### •

#### **Soils Information**

- Complete Soils and Site Evaluation Report (form # SBD-8330) for each backhoe pit described; signed and dated by a certified soil tester, with license number.
- Separate sheet showing the location of all borings. The location of all borings and backhoe pits must be able to be identified on the plot plan.

#### **Documentation**

- Architects, engineers or designers must sign, seal and date each page of the submittal or provide an index page, which is signed, sealed and dated.
- Master Plumbers must sign, date and include their license number on each page of the submittal or provide an index page, which is signed, sealed and dated.
- Three completed sets of plans and specifications (clear, permanent and legible); submittals must be on paper measuring at least 8-1/2 by 11 inches.

#### Plot Plan

- Dimensioned plans or plans drawn to scale (scale indicated on plans) with parcel size or all property boundaries clearly marked.
- Slope directions and percent in system area.
- Benchmark and north arrow.
- Setbacks indicated as per appropriate code.
- Two-foot contours to 25ft. on all sides of system area or include elevations at all four corners of proposed system.
- Location information; legal description of parcel must be noted.
- Location of any nearby existing system.

#### Plan View

- Dimensions for distribution cell(s).
- Location of observation pipes.
- Dimensions for fill for mound.
- Pipe lateral layout, which must include the number of laterals, pipe material, diameter and length; and number, location and size of orifices.
- Manifold/force main locations, with materials, length and diameter of each.

#### **Cross Section Of System**

- Include tilling requirement, depth and size of aggregate, percent slope, side slope, and cover material.
- Lateral elevation, position of observation pipes, dimensions and depths of aggregate, and type of cover material such as geotextile fabric, and depth, if applicable.

#### **System Sizing**

- For one- and two-family dwellings, the number of bedrooms must be included.
- For public buildings, the sizing calculations must be included.

#### Tank And Pump / Siphon Information

- All construction details for site-constructed tanks.
- Size and manufacturer information for prefabricated tanks.
- Notation of pump or siphon model, pump performance curve, friction loss for force main and calculation for total dynamic head.
- Cross section of tank / chamber to include storage volumes; connections for piping, vents, and electricity; pump "off" setting; dosing cycle and volume; and location of vent and manhole.
- Cross section of two compartments tanks or tanks installed in a series must include information listed above.

### B. Inspections.

Inspection shall be made in accordance with ch. 145.20, Wis. Stats and s. Comm 83.26, Wis. Adm. Code. The inspection form on the following two pages may be used. The inspection of the system installation and/or plans is to verify that the system at least conforms to specifications listed in Tables 1 - 3 of this manual.

# POWTS INSPECTION REPORT

# (ATTACH TO PERMIT) GENERAL INFORMATION

Permit Holder's Name		City Village Town of					f	County			San	Sanitary Permit No.		
State Plan ID No.			Tax Parcel No.						Property Address if Available					
TANK INFORMATION							SETBACKS							
TYPE MANUFA				CAPACITY		P/L		WELL		BLDG.	VE TO	NT AIR AKE	ROAD	
SEPTIC														
DOSING														
AERATION														
HOLDING														
PUMP / SIPHON INFORMATION														
Manufacturer:			Model No.				Demand in GPM Vert. Lift							
FOF	RCE MA	IN INFO	)RMA	RMATION				FRICTION LOSS						
Length		Diameter		Dist	. To	Well	Compor	nent	Head	TDF	lt	t TDH - Design		
SOIL ABSORPTION COMPONENT														
TYPE OF COMPONENT COVER MATERIAL														
Cell Width	Cell I	Cell Length		Cell Diameter Cell D			pth Horizontal Separation				Liquid D	Liquid Depth No. of C		. of Cells
LEACHING CHAMBER OR UN			NIT Manufacturer				Model N			No.				
								Well			Lake/	Lake/Stream		
SETBACK INFO. Property Line Bldg. Well Lake/Stream  DISTRIBUTION COMPONENT / Elevation data on back of form												1		
Header / Manifold			Distribution Pipe							ole size			ing Obsv. Tubes Inst. & No.	
Length	Dia.		Length Dia.			Dia. S	Spacing							
			- 2	,-	-	SOIL CO			ı					
Depth over center of cell:		Depth over edge of cell:			Depth of Cover material				Seeded / Sodded			Mulched		
DEVIATIONS FROM APPROVED PLAN														
DATE OF INST. DIRECTIVE: DATE OF ENFORCEMENT ORDER:														
DATE OF REFERRAL TO LEGAL COUNSEL:														
COMMENTS (Persons present, discrepancies, etc.)														
COMPONENTS NOT INSPECTED														
Plan Revision Required Date:  Yes No				Signature of Inspector:							Cert. Number			

Sketch on other side

# **ELEVATION DATA**

Point	Back	Height of	Foresight	Elevation	Comments
	sight	instrument			
Bench mark	-				
Bldg. sewer					
Tank inlet					
Tank outlet					
Tank inlet					
Tank outlet					
Dose tank					
inlet					
Bottom of					
dose tank					
Dist. lateral 1					
System elev. 1					
Dist. lateral 2					
System elev. 2					
Dist. lateral 3					
System elev. 3					
Grade elev. 1					
Grade elev. 2					
Grade elev. 3					

**SKETCH OF COMPONENT & ADDITIONAL COMMENTS**